



pure indoor living



DIGITAL
TOWER FAN

MODEL: BTF3512SB-CN



Instruction Leaflet

Read instructions before operating. Retain for future reference.



 
Questions? Comments? Call 1-800-253-2764 in North America.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner.
10. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
11. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
12. Do not use outdoors.
13. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
14. Always use on a dry, level surface.
15. Do not operate fan until fully assembled with all parts properly in place.
16. This product is intended for household use ONLY and not for commercial or industrial applications.
17. WARNING: To reduce the risk of electrical shock and injury to persons, do not use in window.
18. WARNING: To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control device.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

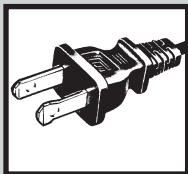

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

ASSEMBLY

ASSEMBLY INSTRUCTIONS

Assembly Time: 10-15 minutes.

 
Tools Required: Phillips head screw driver.

NOTE: MAKE SURE YOU REMOVE ALL CONTENTS FROM THE PACKAGE. PLEASE CHECK PACKAGING MATERIALS FOR PARTS THAT COULD BE REQUIRED TO OPERATE YOUR FAN. LOCATE THE BELOW PARTS FROM THE BOX TO PREPARE FOR ASSEMBLY:


- Fan housing
- 2 pedestal halves
- 2 M4x10mm screws for snapping the pedestal halves (packed in a separate plastic bag)
- 2 base halves
- 8 M4x8mm screws (4 pcs for assemble pedestal with fan housing and 4 pcs for base assembly)
- Remote Control (placed in a plastic bag inside the package box)

Follow the steps below in order to assemble the fan pedestal and base before operating your fan:


1. Pull the power cord through the 2 pedestal halves, making sure the wider end of the pedestal is facing towards the fan housing (Fig. 1).

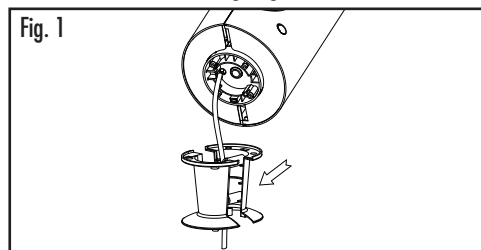

 
2. To assemble the pedestal, use 2 provided screws (M4x10mm) to insert from the side of the pedestal to snap the 2 pedestal halves together. Secure the screws with a screwdriver (Fig. 2).

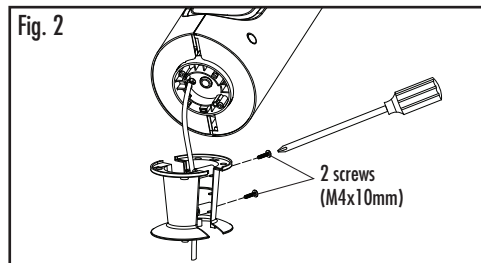

 
3. Align the arrow markings, located at the bottom of the fan housing, with arrow markings on the top end of the assembled pedestal. Insert the rectangular alignment post from the fan housing into the rectangular alignment hole on pedestal for proper alignment. Apply the SAME for the circular alignment post from fan housing and insert into the circular alignment hole on the pedestal (Fig. 3).

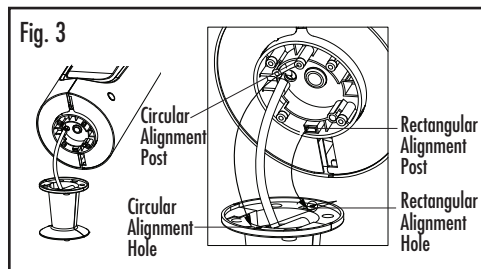

 4. Use 4 screws (M4x8mm) provided to attach the assembled pedestal to the bottom of the fan housing. Secure the screws with a screwdriver (Fig. 4).

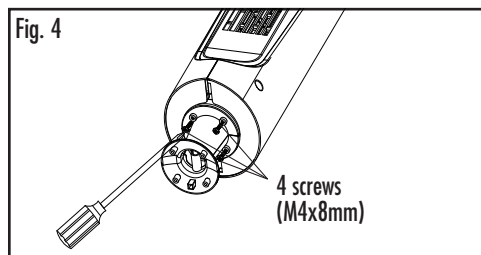


 5. Pull the power cord through the center hole of the base halves. Snap the 2 base halves together by sliding the posts of one base half into the slots of the second base half (Fig. 5).

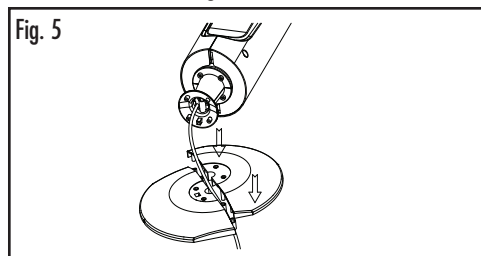


ASSEMBLY

 
- Align the arrow markings, located on the bottom end of the pedestal, with arrow markings at the center hole of the base. Insert the rectangular alignment post from the pedestal into the rectangular alignment hole on base for proper alignment. Apply the SAME for the circular alignment post from pedestal and insert into the circular alignment hole on base (Fig. 6).

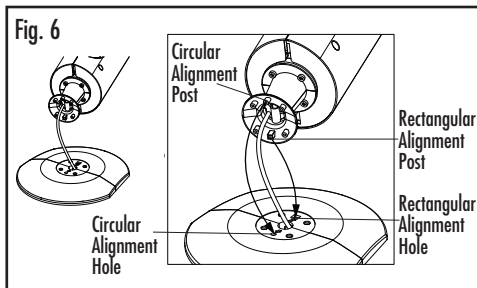

 - Use 4 screws (M4x8mm) provided to attach the assembled base to the pedestal. Secure the screws with a screwdriver (Fig. 7).

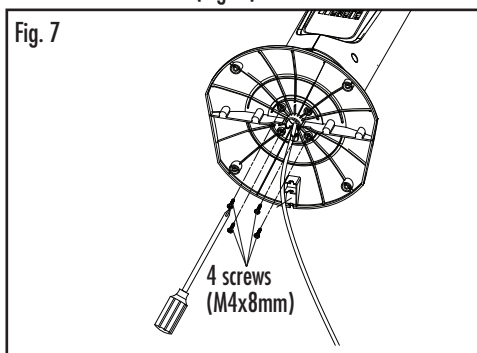

 - Wind the power cord underneath the base and snap the cord through the cord clip (Fig. 8).

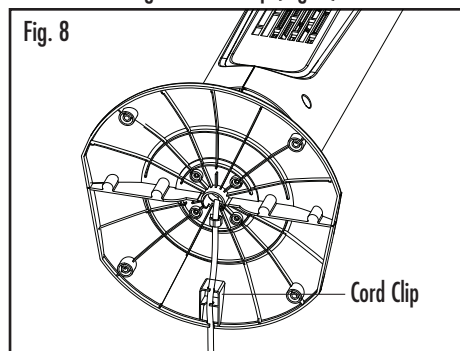

- Turn fan right side up and place on a dry and level surface before operating.

FEATURES - OPERATIONS

OPERATING INSTRUCTIONS (SEE FIG. 9)


Plug the fan into any standard 120 volt AC outlet. All major features of this fan can be operated by pressing the buttons either on the control panel or on the remote control:

- A. Power/Speed Settings Press = 1, 3, 2, 1, Off
- B. Oscillation Control Press = Oscillation On, Off
- C. Natural Breeze, Sleep Breeze Modes Press = Natural Breeze, Sleep Breeze
Natural Breeze Mode will cycle through the fan speed settings randomly.
Sleep Breeze Mode will cycle through the fan speed settings in order.
- D. Timer Control Press = Turns Off in 1, 2, 4, 8 hours


NOTE: Your fan features LED indicator lights. When a specific feature is activated on your fan, a corresponding LED indicator light will illuminate showing which features have been activated.

Fig. 9

 Control Panel

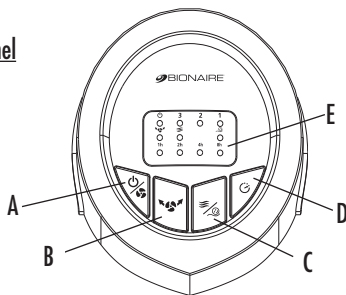

Remote Control

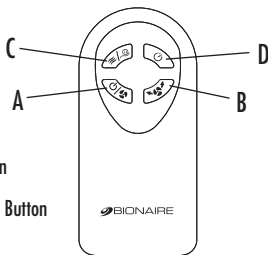 

- A. Power/Speed Button
- B. Oscillation Button
- C. Breeze/Sleep Mode Button
- D. Timer Button
- E. LED Display Panel

REMOTE CONTROL

This unit includes a remote control which requires two (2) AAA batteries, 1.5V (not included).

Battery Replacement

- a) Remove battery cover from remote control.
- b) Remove old batteries from the remote control.
- c) Insert two new batteries, pressing them firmly into their slot.
- d) Replace the battery cover.

NOTES:

- Replace all batteries of a set at the same time.
- Being careful not to bend or damage the contact spring, clean the battery contacts and devices' contacts prior to installing the batteries.
- Remove the batteries from the equipment when it is not being used for an extended period of time.
- Remove the used batteries promptly.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not discard used batteries into household trash containers. Contact your local government for disposal or recycling practices in your area.

This Class B digital apparatus complies with Canadian ICES-003.

CLEANING / MAINTENANCE FAN STORAGE

CLEANING/MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your Tower Fan. Please remember:

FAN CLEANING:

- Always unplug the fan before cleaning.
- Clean the fan with a soft cloth moistened with a mild soap solution.
- Do not allow water to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, benzene.
- You may also clean the front grill of the fan by lightly running a vacuum cleaner nozzle over the grill surface.

FAN STORAGE

In the off-season, it is important to keep your fan in a safe, dry location.

- We recommend using the original (or appropriately sized) box.
- Please remember to protect the fan from dust or moisture.

If you have any questions regarding your product or would like to learn more about other Bonaire® products, please contact our Consumer Service Department at 1-800-253-2764 or visit our website at www.bonaire.com.

WARRANTY INFORMATION

How to Obtain Warranty Service

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

WARRANTY INFORMATION

3 YEAR LIMITED WARRANTY

Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of three years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.