



pure indoor living



16-INCH (40cm)
Stand FAN



MODEL: BSF1614 Series

Instruction Leaflet

Read instructions before operating. Retain for future reference.



Questions? Comments? Call 1-800-253-2764 in North America
or visit our website at www.bionairecanada.com.

 
PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids. Plug the appliance directly into a 120V AC electrical outlet.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts.
7. DO NOT operate in the presence of explosives and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. DO NOT operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
12. DO NOT let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.

13. DO NOT use outdoors.
14. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
15. Always use on a dry, level surface.
16. DO NOT operate fan until fully assembled with all parts properly in place.
17. This product is intended for household use only and not for commercial or industrial applications.
18. **WARNING:** To reduce the risk of electrical shock and avoid injury to persons, DO NOT use your fan in the window.
19. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

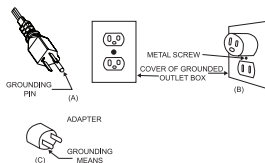

This product is for use on 120 volts. The cord has a plug (A) as shown. An adapter (C) (not included) is available for connecting three-blade grounding-type plugs to two-slot receptacles (B). The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

CAUTION: Use Only with GFCI Protected Receptacles.

FEATURES - OPERATIONS

ASSEMBLY INSTRUCTIONS

Assembly Time: 10-15 minutes.

 
Tools Required: Phillips head screw driver.

NOTE: MAKE SURE YOU REMOVE ALL CONTENTS FROM THE PACKAGE. PLEASE CHECK PACKAGING MATERIALS FOR PARTS THAT COULD BE REQUIRED TO OPERATE YOUR FAN.

Base/Pole Assembly

You will need the base (P), lower outer pole (O), and L-shaped locking lever (Q).

1. Insert the threaded end of the L-shaped locking lever into the hole through the base cover.
2. While holding the base cover with one hand vertically, connect the outer pole to the base, sliding the L-shaped locking lever into the bottom of the outer pole with your other hand.

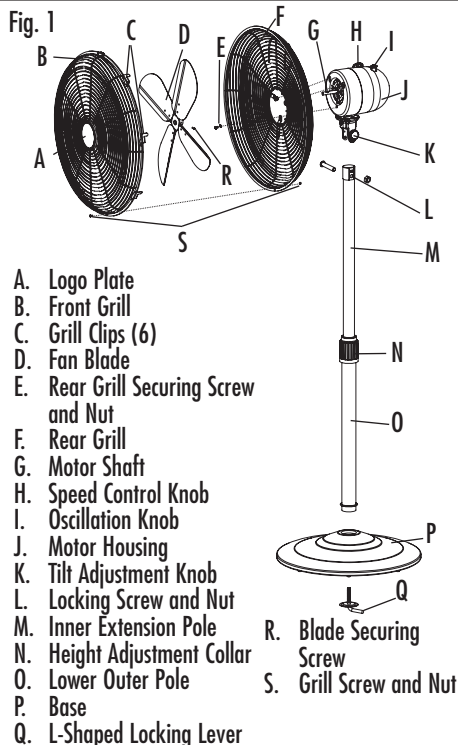


3. Turn the L-shaped locking lever clockwise to securely attach the pole to the base.
4. Set the base on the floor.

Fan Head Assembly

You are now ready to assemble the fan head.

 1. Loosen the Rear Grill Securing Screw and Nut (E) from the motor housing. Position the rear grill (F) over the motor shaft (G), making certain that the 2 guiding posts at top of the rear grill centre aligns with the 2 top holes on the outer ring of the motor housing (J). First insert the 2 guiding posts into the 2 holes at top and pull down the 2 slots to lock in place. Then align the bottom screw post onto the bottom hole and replace the rear grill securing screw and nut (E) and tighten the screw.

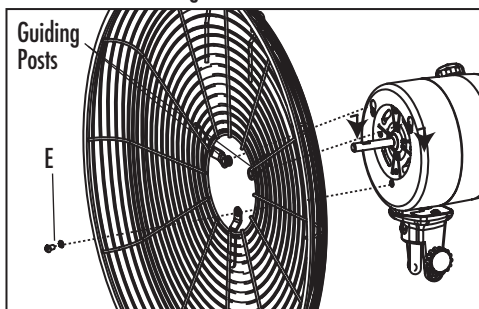

2. Loosen the blade securing screw (R) on side of the fan blade (D) to slide the fan blade onto the motor shaft (G) through the rear protrusion. Make sure the blade securing screw (R) rest on the notch (flat side) of motor shaft and tighten the screw (R).
CAUTION: Avoid contact with sharp end of blades.
3. Remove the grill screw and nut located on the bottom of the grill.
4. Centre the front grill (B) by aligning the Bionaire® logo on the logo plate so that it is horizontal and parallel with the floor. Then place the bracket at the top over the front and rear grills with the hole on the bracket going through the center vertical bar. Fasten the other clips, making sure they go over both the front and rear grills.
5. Replace grill screw and nut (S) and tighten with screw driver.

FEATURES - OPERATIONS

Final Assembly

1. Slide the inner extension pole (M) up from the lower outer pole (O), first loosening the height adjustment collar (N). To securely hold this position, tighten the height adjustment collar (N).
2. Place the fan head assembly into this extension pole, inserting the fan's head neck into the pole opening. Lock the neck into the extension pole by using the locking screw and nut (L) and secure tightly.

OPERATING INSTRUCTIONS

1. Set fan base on a dry, level surface.
2. Plug cord into any standard 120 volt AC outlet. Please make sure the Speed Control Knob is in the OFF (O) position. Speed Control Knob (H) is located on the Fan Motor Housing.
3. The SPEED is adjusted by turning the Speed Control Knob (H) to the desired setting, **O-1-2-3**.
4. The OSCILLATION control knob (I) is located on the top of the Fan Motor Housing. To start Oscillation, push Control knob down. To stop Oscillation, pull Speed Control Knob up.

ADJUSTMENT INSTRUCTIONS

Tilt-Adjustment

Follow these instructions to tilt the Fan Head for upward angle air movement.

1. To change the tilting angle of the fan head, simply loosen the tilt-adjustment knob (K).
2. Move the fan head to the desired angle and firmly tighten the tilt-adjustment knob to lock into place.

Height Adjustment

Follow these instructions to adjust the height of the fan.

1. While holding the inner extension pole (M) with one hand, turn the height adjustment collar (N) counter-clockwise to loosen the pole.
2. Adjust the pole to the desired height and firmly tighten the height adjustment collar in a clockwise direction.

CLEANING/MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your fan. Please remember:

FAN CLEANING

- Always unplug the fan before cleaning or disassembling.
- Do not allow water to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, benzene.

Fan Blade Cleaning

1. To access the fan blade, remove the front grill and securing screw.
2. Clean the fan blade, front and rear grills with a soft, moist cloth.
3. Replace blade, tighten securing screw and securely fasten the front grill (see detailed instructions in the Fan Head Assembly section).

Fan Head, Base and Pole Cleaning

Using a soft, moist cloth, with or without a mild soap solution, carefully clean the fan base, pole and head. Please use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.

FEATURES - OPERATIONS

FAN STORAGE INSTRUCTIONS

Your fan should be stored in the off-season in its original box. It is important to keep it in a safe, dry location.

- We recommend using the original (or appropriately sized) box.
- Please remember to protect the fan from dust or moisture.

If you have any questions regarding your product or would like to learn more about other Bionaire® products, please contact our Consumer Service Department at 1-800-253-2764 or visit our website at www.bionairecanada.com.

WARRANTY INFORMATION

1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period.

Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In Canada

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**