



pure indoor living



Transformable **STAND FAN**

MODEL: BSF1411AR-CN

Instruction Leaflet

Read instructions before operating. Retain for future reference.



Questions? Comments? Call 1-800-253-2764 in North America
or visit our website at www.bionairecanada.com.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, adapter or cord in water or spray with liquids and plug the adapter directly into a 120V AC electrical outlet.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any appliance with a damaged cord or adapter after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or return to an authorized service facility for examination and/or repair.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
12. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
13. Do not use outdoors.
14. To disconnect, grip adapter and pull from wall outlet. Never yank on cord.
15. Always use on a dry, level surface.

16. Do not operate fan until fully assembled with all parts properly in place.
17. This product is intended for household use ONLY and not for commercial or industrial applications.
18. **WARNING:** To reduce the risk of electrical shock and injury to persons, do not use in window.
19. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS


PRE-OPERATING INSTRUCTIONS

Your fan comes fully assembled, simply unfold and transform the fan to stand fan position, no tool is required. Follow the below steps to transform the fan to stand fan position and adjust to desirable height:

1. Press and hold the Base Joint Pivot Button on Base, and use another hand to pull up the fan head with the extension pole until reaching the maximum angle, and then release the button to fix the position (see Figure 1 and 2).


NOTE: The pole will NOT stand perfectly vertical when pulling to the final location.

 Figure 1



Base Joint Pivot Button

 Figure 2

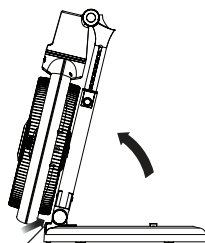

Base Joint Pivot Button

FEATURES - OPERATIONS

 

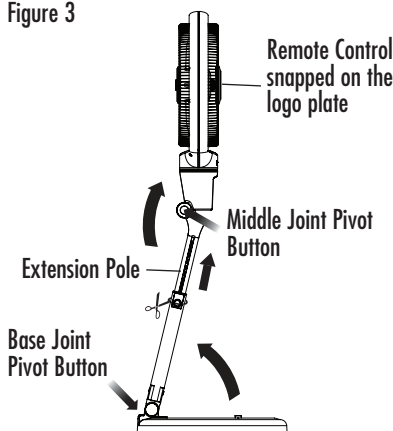 
- Press and hold the Middle Joint Pivot Button below the control panel (press from both sides of the button), and use another hand to pull up the fan head to vertical position, and then release the button to fix the position (see Figure 3).
- NOTE:** Cut and remove the zip tie from the pole (see Figure 3). To extend the height of the stand fan, simply pull up the fan head to draw out the extension pole to your desired height.
- Take out the remote control from the logo plate to prepare for operations.
- To turn the oscillation on and off, press the oscillation button () located on the control panel or remote control.
- To set your fan to automatically shut off, press the timer button () located on the control panel or the remote control. When set, the fan will run and automatically shut off after the set duration of time (1, 2, 4, or 8 hours) has expired.

Figure 3



OPERATING INSTRUCTIONS



 

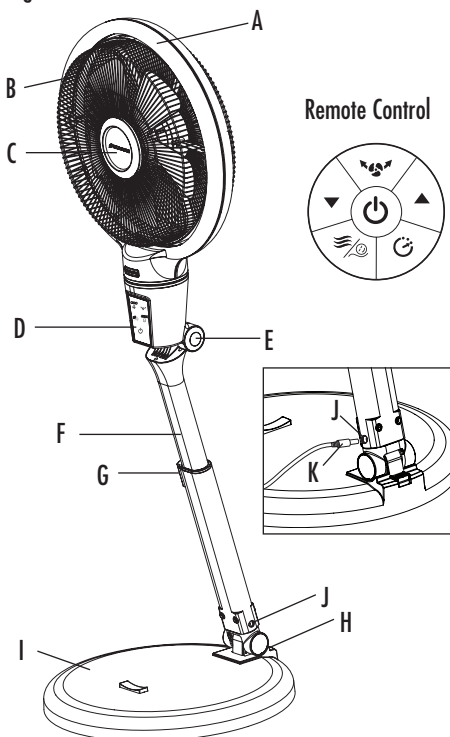 
- Set fan on a dry, level surface.
- Connect the power adapter to the power jack located above and to the side of the Base Joint (see Figure 4). Plug the power adapter into any standard 120 volt AC outlet.
- To turn the fan on, press the power button () located on the control panel or remote control.
- To select your desired speed setting, press the speed button () on the control panel or press the arrow buttons ( / ) on the remote control to cycle through three speed settings (1-2-3). The corresponding indicator light will illuminate to indicate which setting is selected.

Figure 4



- | | |
|------------------------------|----------------------------------|
| A. Outer Ring | G. Extension Pole Release Button |
| B. Fan Head | H. Base Joint Pivot Button |
| C. Logo Plate | I. Base |
| D. Control Panel | J. Power Jack |
| E. Middle Joint Pivot Button | K. Power Adapter |
| F. Extension Pole | |

FEATURES - OPERATIONS

7. To activate the breeze/sleep mode, press the breeze/sleep button (≡/⌚) located on the control panel or remote control. In Breeze mode, the fan will randomly cycle through the speed settings recreating a natural outdoor breeze. In Sleep mode, the fan will cycle through the speed settings in order.
8. To turn the fan off at any setting, press and hold the power button (⏻) located on the control panel or remote control.

NOTE: Your fan features LED indicator lights. When a specific feature is activated on your fan, a corresponding LED indicator light will illuminate showing which features have been activated.

REMOTE CONTROL HANDSET

NOTE: PLEASE REMOVE THE PROTECTIVE FILM FROM THE REMOTE CONTROL BATTERY BEFORE OPERATION.

This unit includes one lithium battery, CR2032/3V. Remove battery before discarding the remote.

Battery Replacement


- a) Locate the battery compartment on the back of the remote control handset. Slide the tab with your thumb and take out the battery cover.
- b) Remove old battery.
- c) Place new battery into battery compartment.
- d) Slide battery compartment into the remote control handset.

NOTES:

- THIS PRODUCT CONTAINS A BUTTON BATTERY. IF SWALLOWED, IT COULD CAUSE SEVERE INJURY IN JUST 2 HOURS. SEEK MEDICAL ATTENTION IMMEDIATELY.
- Remove the battery from the equipment when it is not being used for an extended period of time.
- Remove the used battery promptly.
- Do not discard used batteries into household trash containers. Contact your local government for disposal or recycling practices in your area. This Class B digital apparatus complies with Canadian ICES-003.

Figure 5

 Control Panel

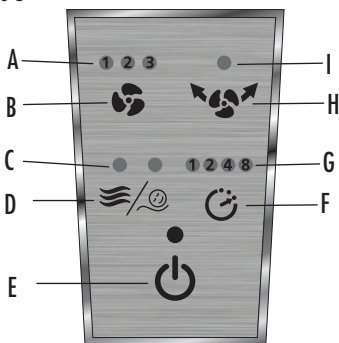

- | | |
|---------------------------------------|---|
| A. Speed Indicator Lights (1-2-3) | F. Timer Button (⌚) |
| B. Speed Control Button (fan icon) | G. Timer Indicator Lights (1hr/2hr/4hr/8hr) |
| C. Breeze/Sleep Mode Indicator Lights | H. Oscillation Button (oscillation icon) |
| D. Breeze/Sleep Button (≡/⌚) | I. Oscillation Indicator Light |
| E. Power Button (⏻) | |

Figure 6

Remote Control



- | | |
|------------------------|------------------------|
| A. Power Button | C. Timer Button |
| B. Arrow Buttons (▲/▼) | D. Breeze/Sleep Button |
| | E. Oscillation Button |


FEATURES - OPERATIONS

ADJUSTMENT INSTRUCTIONS

Tilt-Adjustment

If you would like to adjust the stand fan for upward/downward angle of air movement, pull the fan head with both hands for slight tilt angle adjustment (see Figure 7). You will hear clicks while adjusting the tilt angle.

 Figure 7

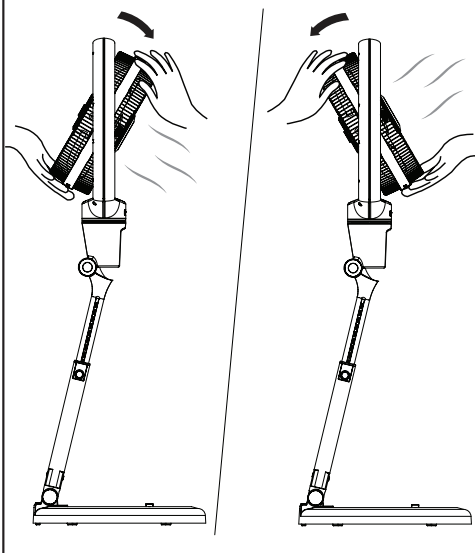

Height Adjustment

To adjust the height of the stand fan. Press and hold the Extension Pole Release Button and lower down the extension pole into the lower pole.

CLEANING AND MAINTENANCE

TRANSFORMING FAN INTO 4 USE CONFIGURATIONS


Your fan is designed to function well in all below possible configurations:

1. Stand Fan

Press the Extension Pole Release Button to adjust the height of the extension pole in Stand Fan configuration (see Figure 8).

NOTE: Oscillation cannot work in the other configurations (Table Fan, Air Circulator and Storage). Before folding up the fan, please make sure the fan head is back to the vertical position facing front as shown in Figure 8.

 
Figura 8

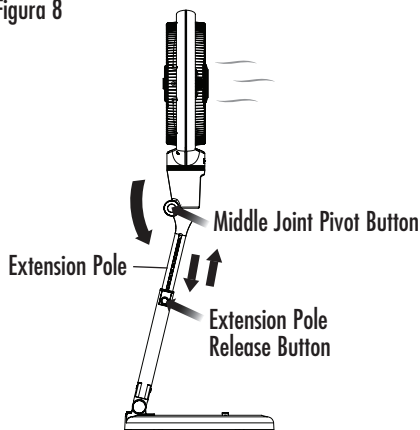

2. Table Fan

Press and hold the Middle Joint Pivot Button below the control panel (press from both sides of the button), and use another hand to push the fan head backward and fold towards the pole (see Figure 8) until resting to the Table Fan position as shown in Figure 9. Press the Extension Pole Release Button to adjust the height in Table Fan configuration.

 
Figura 9

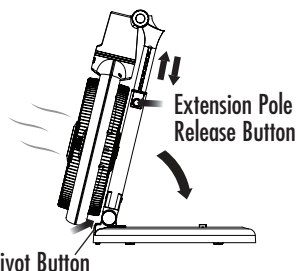

3. Air Circular

Press and hold the Base Joint Pivot Button on Base, and use another hand to push the fan head with the pole (see Figure 9) until resting onto the base horizontally in the configuration of air circulator as shown in Figure 10.

 Figura 10

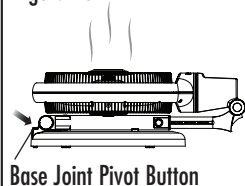

4. Storage

Turn off the fan and unplug the adaptor as in the air circulator configuration (see Figure 10). This folded position allows you to place the fan into the original shipping carton for storage. Some models include a storage bag, you may place the fan into the provided bag for storage.

NOTE: When storing your fan in the off season, it is important to keep it in a safe dry location. It is important to protect the fan head from dust.

WARRANTY INFORMATION

1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

CLEANING AND MAINTENANCE

CLEANING/MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your fan. Please remember:

Fan Cleaning

- Always unplug the fan before cleaning.
- Do not allow water to drip on or enter into fan housing.
- Be sure to use a soft cloth moistened with a mild soap solution.
- Do not use gasoline, thinner or benzene as a cleaner.

Clean the fan grill, housing and base with a soft, damp cloth. Do not attempt to remove the fan blade. Please use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.

If you have any questions regarding your product or would like to learn more about other Bonaire® products, please contact our Consumer Service Department at 1-800-253-2764 or visit our website at www.bonairecanada.com.