



OIL FREE HEATER
RADIATEUR SANS HUILE
CALEFACTOR SIN ACEITE
AQUECEDOR SEM ÓLEO

MODEL/MODÉLE/MODELO:
BOF1500

INSTRUCTION MANUAL
MANUEL D'INSTRUCTIONS
MANUAL DE INSTRUCCIONES
MANUAL DE INSTRUÇÕES

PLEASE READ AND SAVE THESE IMPORTANT SAFEGUARDS

 
IMPORTANT INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. To avoid fire or shock hazard, plug the appliance into the appropriate outlet.
3. The heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 0.9 m (3 feet) from the front of the heater and keep them away from the sides and rear.
4. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
5. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER place heater where it may fall into a bathtub or other water containers.
6. Always unplug the heater when not in use.
7. When unplugging, be sure to pull by the plug and not the cord.
8. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
9. DO NOT operate heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or damaged in any manner. Take appliance to Authorized Service Center for examination, electrical or mechanical adjustment, or repair.
10. A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
11. Use appliance only for intended household use as described in this manual. Any other

use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by the manufacturer may cause hazards.

12. DO NOT use outdoors.
13. To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
14. To disconnect heater, turn controls to the OFF position, then remove the plug from outlet.
15. Always plug heaters directly into a wall outlet/receptacle. Never use an extension relocatable power tap (outlet/power strip).
16. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
17. Discontinue use if plug or outlet is hot. It is recommended that the outlet be replaced if plug or outlet is hot to touch.
18. If the heater will not operate, see specific instructions on Auto Safety Shut-off.
19. WARNING: In order to avoid overheating, do not cover the heater (⚠).
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
21. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.
22. FOR FLOOR USE ONLY.
23. Connect to properly grounded outlets only.
24. WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

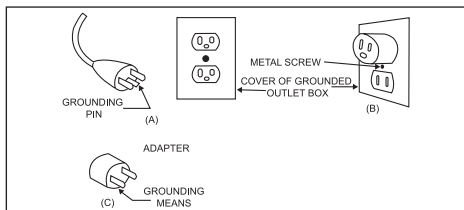

PLEASE SAVE THESE INSTRUCTIONS

CONSUMER SAFETY INFORMATION

This product is for use on 120 volts. The cord has a plug (A) as shown. An adapter (C) (not included) is available for connecting three-blade grounding-type plugs to two-slot receptacles (B). The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

 
ASSEMBLY INSTRUCTIONS

Unpack your heater from the box, being careful to remove all parts from plastic bags and remaining packaging. Please save the carton for off-season storage.

This heater is packed with 4 casters that are pre-assembled on 2 separate foot plates in the box. Follow the below instructions for Foot Plates assembly:

Foot Plates Assembly

Step 1: Turn the heater upside down, locate the 4 wing head screws packed inside the box.

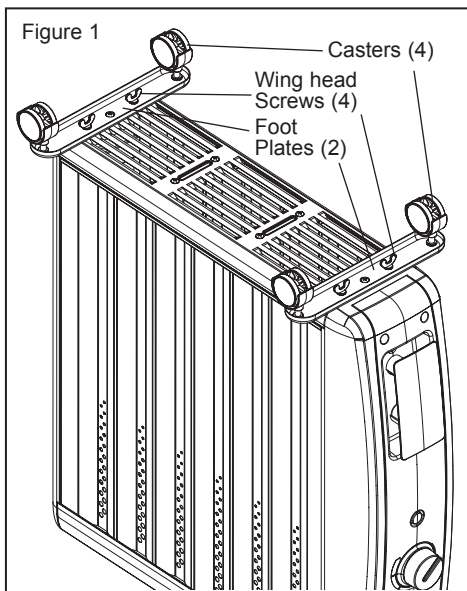

Step 2: Install the 2 foot plates onto the bottom at both ends of the heater housing. Line up holes of the foot plates with holes on bottom of heater housing at both ends, and secure with the 4 provided screws. (Refer to Figure 1)

Step 3: Turn the heater right side up on a flat level surface prior to beginning operation. (Refer to Figure 2)


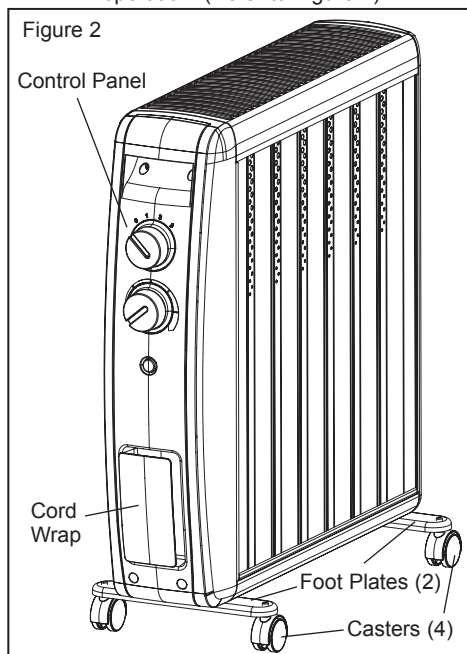 


Figure 3 **CONTROL PANEL (close-up)**

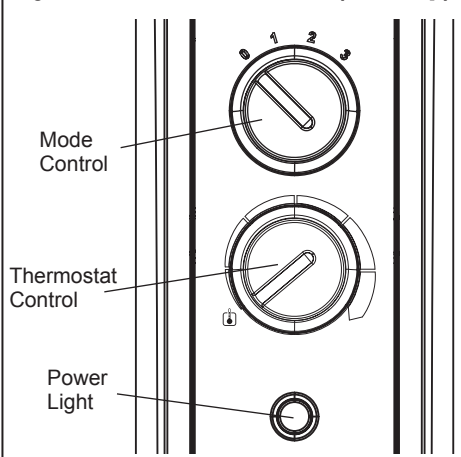 

OPERATING INSTRUCTIONS

1. Place heater on a firm, level surface.
2. Make sure the Mode Control is at the OFF(0) position. Plug heater into a standard outlet. Once plugged in, the Power Light will illuminate.

NOTE: Avoid overloading your circuit by not using other high wattage appliances in the same outlet. At 1500 watts, this unit draws 12.5 Amps.

3. To start operations, turn the Thermostat Control clockwise to the highest setting.
4. Turn the Mode Control to the desired level of heat (1-2-3).
5. To turn off the heater at any time, turn the Mode Control to OFF (0) position.



Thermostat Control

1. To start operations, turn the Thermostat Control clockwise to the highest setting.
2. When the desired temperature or comfort level is reached, turn the Thermostat Control counter-clockwise to a lower position or until the heater stop operating.
3. The heater will now automatically maintain the preset temperature level by turning the heater ON and OFF.



Frost Guard Setting

Your heater is equipped with **Frost Guard** setting. The heater will turn on automatically when the room temperature drops below 4°C. To activate Frost Guard, turn the Thermostat Control all the way counter-clockwise to the lowest position. If the room temperature drops below 4°C, the heater will automatically start working to maintain its ambient temperature.

NOTE: It is normal for the heater to cycle on and off to maintain the preset temperature. Raise the thermostat setting to prevent the heater from cycling.

CORD STORAGE

For easy storage, wrap cord around the Cord Wrap position at the front of the heater.

CLEANING/MAINTENANCE

Always unplug the heater before cleaning and allow the heater to cool down.

1. Clean the unit with a soft cloth moistened with a mild soap and water solution.
2. NEVER use abrasive or flammable solvents to clean the unit.
3. After cleaning, be sure to completely dry the unit with a cloth or towel.
4. Store heater in a cool, dry location.

5. It is recommended that you store the unit in its original carton.

For inquiries regarding recycling and proper disposal of this product, please contact your local waste management facility.

AUTO SAFETY SHUT-OFF

This heater is equipped with a technologically-advanced safety system that requires the user to reset the heater if there is a potential overheat situation. When a potential overheat temperature is reached, the system will automatically shut the heater off. It can only resume operation when the user resets the unit.

If the heater shuts down and the Power Light is flashing:

1. Stand the heater upright, and turn the Mode Control to Off (0).
2. Unplug the heater and allow 30 minutes for the heater to cool down.
3. After 30 minutes plug the heater in and operate normally.
4. If the heater does not work normally, repeat steps 1, 2 and 3 again.

Tip Over Shut-Off:

When the unit is accidentally knocked over or tilts on one side at more than a 45° angle, it will instantly shut off. The unit may also shut off if it is moved or bumped. To reset, simply place the heater in an upright position, and it will operate normally.

TROUBLE SHOOTING

General Information:

Environmental Factors - There are a number of factors that will affect your desired comfort level. These factors can include insulation, open or drafty doors and windows, and outside temperature. Please check and take action if any of these potential problems are affecting your heaters ability to adequately warm your room.

Supplemental Heat - Portable electric heaters are intended for supplemental heating of the room you are in and turn down the central heat thermostat. They are not intended to replace central heating systems.

DO NOT attempt to repair or adjust any electrical or mechanical functions on this heater. Doing so will void warranty. The inside of the heater contains no user serviceable parts. All servicing should be performed by qualified personnel only.

If your heater fails to operate:

- UNPLUG the heater.
- Make sure the electrical outlet or circuit breaker is working.

- The thermostat temperature may be set too low. Turn the Thermostat Control clockwise until the heater restarts.

WARRANTY - LATIN AMERICA

1 Year limited warranty, please see separate insert for details.

WARRANTY - CANADA ONLY

1 YEAR LIMITED WARRANTY

In Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

FRANÇAIS

VEUILLEZ LIRE ET CONSERVER CES DIRECTIVES DE SÉCURITÉ IMPORTANTES

DIRECTIVES IMPORTANTES

Lors de l'utilisation d'un appareil électrique, il faut toujours respecter les mesures de sécurité de base, y compris celles stipulées ci-dessous, afin de réduire le risque d'incendie, de choc électrique et de blessure: