

pure indoor living



Instruction Leaflet

Read instructions before operating. Retain for future reference.



Questions? Comments? Call 1-800-253-2764 in North America.

 
PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1. Read all instructions before using this appliance.
- Use fan only for purposes described in the instruction manual.
- To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
- 6. Avoid contact with moving parts.
- Do not operate in the presence of explosive and/or flammable fumes.
- To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
- Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner.
- The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
- Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.

- 12. Do not use outdoors.
- To disconnect, grip plug and pull from wall outlet. Never yank on cord.
- 14. Always use on a dry, level surface.
- Do not operate fan until fully assembled with all parts properly in place.
- This product is intended for household use ONLY and not for commercial or industrial applications.
- 17. WARNING: To reduce the risk of electrical shock and injury to persons, do not use in window.
- WARNING: To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control device.
- 19. ATTENTION: Please ensure there is no obstruction around the fan in order to allow the unit to oscillate properly. If obstructed, the unit may temporarily stop working. Normal operation will resume once the obstruction is removed.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS



This product is for use on 120 volts. The cord has a plug (A) as shown. An adapter (C) (not included) is available for connecting three-blade grounding-type plugs to two-slot receptacles (B). The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

CAUTION: Use Only with GFCI Protected Receptacles.

FEATURES - OPERATIONS

ASSEMBLY INSTRUCTIONS

Your Table Fan comes completely assembled and is ready for immediate use. Carefully unpack your fan, read the instructions completely, plug it in and enjoy!

OPERATING INSTRUCTIONS


- Set the fan base on a dry, level surface.
 Plug cord into any standard 120 volt AC outlet.
 Please make sure the Speed Control Switch is in the OFF (0) position. The Speed Control Switch is located on the Base
- 3. The speed is adjustable by turning the Speed Control
- Switch to the desired setting, 0-1-2-3.

 The OSCILLATION control knob () is located on the top of the fan motor housing. To start oscillation, push control knob down. To stop oscillation, pull control knob up.


ADJUSTMENT INSTRUCTIONS

Tilt Adiustment:

Loosen the tilt-adjustment knob and move the fan head to the desired angle. Once your fan is at the appropriate angle, tighten the knob by turning clockwise.

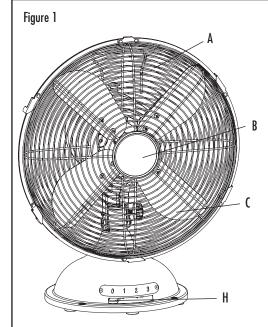

- A. Front Grill
- B. Logo Plate
- C. Fan Blade
- D. Base
- E. Carry Handle

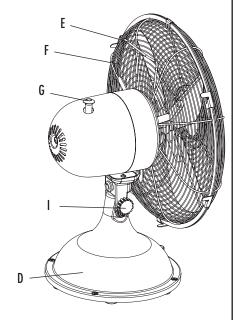

- Rear Grill
- G. Oscillation Control Knob
- H. Speed Control Switch
- Tilt Adjustment Knob

CLEANING / MAINTENANCE

CLEANING/MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your table fan. Please remember:

- Always unplug the fan before cleaning or disassembling.
- Do not allow water to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: aasoline, thinner, or benzene.
- Step 1: Remove the front grill by expanding the clips located around the perimeter of the grill and remove the bottom grill screw.
- Step 2: Remove the blade by loosening the securing screw.
- Step 3: Clean the fan blade, both front and rear grills with a soft cloth moistened with a mild soap solution.
- Step 4: Replace blade, tighten the fan blade by screwing the fan blade back on, and securely fasten the front grill by closing the clips over the perimeter of the grill and tighten the bottom grill screw.

Fan Head and Base Cleaning

Using a soft, moist cloth, with or without a mild soap solution, carefully clean the fan base and head. Please use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.

FAN STORAGE

When storing your fan in the off season, it is important to keep it in a safe dry location. It is important to protect the fan head from dust. WE STRONGLY RECOMMEND IISING THE ORIGINAL BOX FROM PURCHASE

If you have any questions regarding your product or would like to learn more about other Bionaire® products, please contact our Consumer Service Department at 1-800-253-2764 or visit our website at www.bionairecanada.com.

WARRANTY INFORMATION

1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty. This warranty is valid for the original retail purchase from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In Canada

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

WARRANTY INFORMATION

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y OM1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

^{© 2014} Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Imported and distributed by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, 20B Hereford Street, Brampton, Ontario L6Y 0M1.