

pure indoor living



Instruction Leaflet

Read instructions before operating. Retain for future reference.

Questions? Comments? Call 1-800-253-2764 in North America or visit our website at www.bionairecanada.com.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. These precautions include:

- 1. Read all instructions before using the appliance.
- 2. To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
- If the filter is covered by a bag when shipped: Remove plastic bag before use.
- Keep the cord out of heavy traffic areas. To avoid fire hazard, NEVER put the cord under rugs, near heat registers, radiators, stoves, or heaters.
- To protect against electrical hazards, DO NOT immerse in water or other liquids. Do not use near water.
- Close supervision is necessary when any appliance is used by or near children, or disabled persons.
- Always unplug the air cleaner before moving or cleaning the unit, opening the grill, changing the filters and whenever the unit is not in use. To disconnect the unit, be sure to pull the plug and not the cord.
- NEVER drop or insert any objects into the openings of the unit.
- Do not operate any appliance with a damaged cord or plug. If the motor fan fails to operate or the unit has been dropped or damaged in any manner, return appliance to manufacturer for examination and/or repair.
- 10. Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by the manufacturer may cause hazards.
- 11. DO NOT use outdoors. Suitable for Dry Location ONLY.
- 12. NEVER place on a soft surface such as a bed or sofa as this could cause the unit to tip over and block the air inlet or outlet arills.
- 13. Keep unit away from heated surfaces and open flames.

- 14. DO NOT place anything on top of unit.
- 15. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by Jarden Consumer Solutions or an authorized Jarden Consumer Solutions Service Center.
- WARNING: To reduce the risk of fire or electric shock, DO NOT use this air cleaner with any solidstate speed control device.
- 17. Always turn the appliance off before unplugging it.
- NEVER use detergents, gasoline, glass cleaner, furniture polish, paint thinner or other household solvents to clean any part of the air cleaner.
- 19. The ionizer in this appliance produces less ozone than the UL established limits of 50ppb (parts per billion). However, in high concentrations, ozone can be harmful to birds and small pets. To prevent ozone buildup, we suggest using the ionizer in well ventilated areas with the fan on.
- 20. This appliance should only be used in a room with temperatures between 40° F and 110° F.
- 21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

PLEASE SAVE THESE IMPORTANT SAFETY INSTRUCTIONS



THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

FEATURES - OPERATIONS

CORD SAFETY

- The length of cord used on this appliance was selected to reduce tangling and tripping hazards.
- If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the air cleaner (see rating label marked on product).
- Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

GET TO KNOW YOUR AIR CLEANER

This unit is compatible with all Aerl™ Filters. This allows you to choose the filter that is just right for you. Below is information on each filter:

TOTAL AIR - Advanced Dust Eliminating Technology ODOR ELIMINATOR - 10x the odor fighting power ALLERGEN REMOVER - True HEPA technology improves air quality for allergy sufferers

ALLERGY PLUS - True HEPA technology improves air quality for allergy sufferers.

GERM REDUCING - True HEPA PLUS Silver infused germ reducing technology, silver coated filter reduces bacteria and viruses from the air stream.

IONIZER

This appliance has an optional ionizer feature which, when turned on, releases negative ions into outgoing filtered air to help the air purification process.

What Are lons?

lons are tiny particles that carry a positive or negative charge. They exist naturally around us: in the air, water, and ground. Both positive and negative ions are colorless, odorless, and completely harmless.

How Does The Ionizer Work?

Negative ions help air purification by attaching themselves to very small airborne particles in the room. These particles take on a negative charge and may join with positively charged particles such as dust, pollen, smoke, and pet dander to form larger particles. These larger particles are then more easily captured by the filter system.

Important Notes:

Your ionizer may produce an occasional popping or cracking sound. This is normal and occurs when a small buildup of ions is discharged.

After extended use, you may notice dust around the grills or front panel. This is caused by negative ions exiting the air outlet, evidence of the ionizer's air cleaning effectiveness. You can remove the dust with a soft brush or clean, damp cloth.

Larger particles may be attracted to positively charged surfaces throughout the home, like walls or floors.

- This may occur more frequently when the filter is nearing the end of its useful product life and unable to capture as many charged particles.
- Excessive amounts of pet dander, dust, or smoke may decrease the life expectancy of the filters and interfere with the ionization process.

To help prevent particles from attracting to surfaces throughout your home:

- You may want to run the ionizer less often.
- Check the condition of filters more frequently.

CAUTION: The ionizer in this appliance produces less ozone than the UL established limits of 50ppb. However, in high concentrations, ozone can be harmful to birds and small pets. To prevent ozone buildup, we suggest using the ionizer in well ventilated areas with the fan on.

IMPORTANT: Always check the condition of the Aerl™ filters at the recommended intervals and replace filters if necessary (See FILTER REPLACEMENT INSTRUCTIONS). Using the ionizer with dirty filters may result in dirty particles exiting the air cleaner and attracting to walls, carpets, furniture, or other household objects. These dirty particles may prove difficult to remove.

FEATURES - OPERATIONS

FILTER CHECK INDICATOR

Your Air Cleaner includes Aer1™ Allergy Plus Filter, specially designed to remove pollen, dust, mold and dander and deliver cleaner air for allergy sufferers!! The Aer1™ Allergy Plus Filter last 12 months. See back panel for other filter options.


The Filter Check Indicator is designed to remind you to check and change your filters every 4 months. To reset the Filter Check Indicator, press and hold the Filter Reset button (F) for 3 seconds only under working mode. For filters with a 12-month filter life, press the Filter Reset Button () then Low Speed Button (1), and then hold both buttons for 3 seconds. The Filter Check Indicator will be reset.

THREE SPEED SETTINGS

For optimum air filtration, operate your Bionaire® air cleaner continuously on the highest (3) setting. Its rugged motor has been designed to give many years of use. For quieter operation (such as in a bedroom), select the lowest (1) setting.

BEFORE USE

- Carefully unpack your air cleaner.
 Select a firm, level surface with no obstructions to the air inlets or outlets.
- 3. Access your Aer1™ Filters. If the filters are covered by bags when shipped, remove plastic bags before use and place filters into unit. (Reference FILTER REPLACEMENT INSTRUCTIONS).

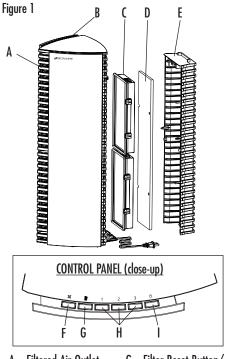

- A. Filtered Air Outlet
- B. Control Panel
- C. Aer1™ Filters
- D. Washable Foam Pre-filter
- E. Air Inlet Grill
- Ionizer Button/Light (₩)
- G. Filter Reset Button/ Light ()
- H. Speed Control **Buttons/Lights** (1-2-3)
- I. Power Button ((1))

FEATURES - OPERATIONS CLEANING AND MAINTENANCE

OPERATING INSTRUCTIONS

IMPORTANT:

- Remove all plastic bags from filters before use.
- DO NOT POINT FILTERED AIR OUTLET TOWARDS WALL.
- 1. Plug into a 120V AC electrical outlet.
- 2. Press the Power Button (()). The air cleaner will turn onto HIGH, the High (3) speed button light will illuminate letting you know the power is on and running at High setting. To turn the air cleaner off at any time, press the power button and all button lights will go off.
- You can then select the desired speed setting. This air cleaner has three speed settings. You can select from HIGH (3), MEDIUM (2), or LOW (1) by pressing the desired operating speed control button on the control panel. The corresponding button light will illuminate to indicate which setting being selected.
- To release negative ions into the filtered air, press the Ionizer Button (⋈) and the button light will illuminate.
- This unit has a built in memory function that will recall the last setting from the previous use. This memory function will only operate if the unit remains plugged in between uses.

NOTE: The ionizer will not work unless the unit is running.

CLEANING AND MAINTENANCE

Cleaning the unit:

- 1. Turn off and unplug the air cleaner.
- 2. The outside of the unit can be cleaned with a soft, clean dampened cloth.
- The air inlet grill (see figure 1) can be cleaned with a soft, clean damp cloth.
- 4. The filtered air outlet can be cleaned of dust with a small soft brush.
- 5. If you wish to clean the inside of the air cleaner, please only use a dry, soft cloth to wipe it down. DO NOT WASH the Aer1™ filters. The Pre-filter (D) can be washed by using a mild dish soap and water. Rinse thoroughly. Allow to air dry completely prior to reinstalling into the Air Inlet Grill (E).

NEVER use detergents, gasoline, glass cleaner, furniture polish, paint thinner or other household solvents to clean any part of the air cleaner.

WARNING: Do not allow moisture to come in contact with the main housing of the air cleaner.

FILTER REPLACEMENT INSTRUCTIONS

IMPORTANT:

- DO NOT attempt to wash and re-use the filter.
- If the filters are enclosed in plastic bags, remove before use.

NOTE:

Every few weeks, check the condition of filters. Filter life will vary, depending on air quality and usage (see below). Under normal conditions of continuous use, the

Aerl™ Total Air and Odor filter will last 4 months while the Allergen, Germ Filter and Allergy Plus Filter will last 12 months.

The Filter Check Indicator Light () will illuminate to alert you to service the filter.

 
To replace your filter:

 
- Turn off and unplug the air cleaner before attempting to replace the filters.
- Remove each of the filters from the unit by pulling them gently towards you.
 Discard the Aer1™ filters. DO
- 3. Discard the Aerl™ filters. DO NOT attempt to clean them.
- Remove protective plastic bags and install new Aer1™ filters into the unit.

NOTE: Ensure proper

assembly of the filter clip to the filter. Attach the filter clip and filter assembly to the air cleaner hang tabs:


 Make sure the hang tab is securely in place. Align the clip on the side of the Aer1™ filter with the rails on the inside of the unit. Gently slide the filter onto the rail (see Figures 2 and 3).





CLEANING AND MAINTENANCE

 Place air inlet grill back onto unit by aligning the bottom of the air inlet grill into the slots located at the base of the rear housing of the unit, and then attach the inlet grill onto the unit and close securely (see Figure 4).

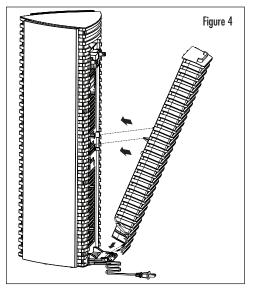

- 5. Reset the Filter Check Indicator by following the below instructions:
 - Filters with a 4-month filter life: Press and hold the Filter Reset Button () for 3 seconds. The Default timer is set for 4 months. This Filter Check indicator is to remind you to perform maintenance to wipe your unit clean, wash the foam pre-filter and to replace the Aer1™ filters.
 Filters with a 12 month filter life: Press the Filter
 - Filters with a 12 month filter life: Press the Filter Reset button () then the Low Speed Button (1), and then hold both buttons for 3 seconds. This filter Check indicator is to remind you to perform annual maintenance to wipe your unit clean, wash the foam pre-filter and to replace the Aer1™ filters.

Filters can be purchased at a retailer near you, online at www.bionairecanada.com, or by calling 1-800-253-2764.

Air Cleaner Model #	Filter Quantity Needed	Compatible with all filter models below	Filter Description
	2	BAPF30AT Bapf30a0	Aer1™ Total Air Filter Aer1™ Odor Filter
BAP520C-CN		BAPF350AG	Aer1™ Germ Filter
		BAPF300AH Bapf300Ap	Aer1™ Allergen Remover Filter Aer1™ Allergy Plus Filter
		BAPF30 (A filter)	Bionaire® "A" Filter

LEARNING MORE

For a wealth of information about your air cleaner and other Bionaire® products, visit our website at www.bionairecanada.com or call 1-800-253-2764.

TROUBLESHOOTING

TIPS AND TROUBLESHOOTING				
Problem	Solution			
Unit will not operate	 ✓ Make sure the unit is plugged in and outlet is energized. ✓ Make sure unit turned ON. ✓ Make sure the Air Inlet Grill is assembled to unit and closed completely. 			
Decreased air flow	 ✓ Make sure nothing is blocking air inlet and filtered air outlets. ✓ Remove all plastic bags from filters. ✓ Check condition of filters and replace if necessary. 			
Excessive noise	Remove plastic bags from filters. Make sure all parts, including filters, filter clips and air inlet grill are firmly positioned in place.			
The filter check indicator will not reset.	 Check condition of the filters and replace if necessary. Press and hold the Filter Reset Button for 3 seconds under power on condition (see Filter Replacement Instructions for details). 			

AERITM FILTER SERIES

Congratulations! Your new air purifier is equipped with the new and improved Aer $\mathbf{1}^{\mathsf{TM}}$ Allergy Plus Filter.

Filter Type		Technology	Consumer Benefit
	Total Air	99% HEPA-Type technology. Infused with Arm & Hammer® baking soda.	Ideal for dust reduction. Delivers 30% better air quality.
	Odor Eliminator	10 times the odor fighting power. Contains Arm & Hammer® baking soda, carbon and zeolite for odor control.	Ideal for eliminating odors from pets, tobacco smoke and cooking fumes.
	Allergen Remover	99.97% True HEPA technology. Removes up to 99.97% of particales passing through the filter such as pollen, dust, mold and dander.	Ideal for allergy sufferers.
	S UNIT MES Allergy Plus H	99.99% True HEPA technology. Helps remove up to 99.99% of particles passing though the filter such as pollen, dust, mold and dander.	Ideal for allergy sufferers.
	Germ Fighter with Allergen Remover	99.97% True HEPA technology. Infused with silver technology.	Helps reduce viruses and bacteria as well as ideal for allergy sufferers.



WARRANTY INFORMATION

3 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of three years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

WARRANTY INFORMATION

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

© 2013 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Imported and distributed by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, 20B Hereford Street, Brampton, Ontario L6Y 0M1.