



pure indoor living



16-INCH (41 CM)
STAND FAN

MODEL: BSF1016RT-CN

Instruction Leaflet

Read instructions before operating. Retain for future reference.



Questions? Comments? Call 1-800-253-2764 in North America.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids. Plug the appliance directly into a 120V AC electrical outlet.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner.
10. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
11. Do not use outdoors.
12. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
13. To disconnect, grip plug and pull from wall outlet. Never yank on cord.

14. Always use on a dry, level surface.
15. Do not operate fan until fully assembled with all parts properly in place.
16. This product is intended for household use ONLY and not for commercial or industrial applications.
17. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.


PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

Carefully unpack contents from carton.

1. Insert Lower Pole through the hole in the center of base and twist clockwise into position. Be sure to align the grooves on the threaded joint with the raised slots protruding from the base center walls. (See Fig. 1)
2. Turn the Base upside down (pole facing the floor) and place the Weight over the threaded pole end. The threads will be exposed as they protrude through the Weight.
3. Secure the Weight to the Base by tightening the Base Nut in a clockwise direction.

NOTE: Do NOT use a tool to tighten the Base Nut.

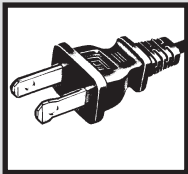


THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

FEATURES - OPERATIONS

4. Insert the remaining Pole with the Threaded Joint into the Hollow End of the pole connected to the Base and twist clockwise to secure.
5. Insert the Decorative Cap through the Pole.
6. Insert the neck of Motor Housing into Hollow End of Upper Pole and turn the neck clockwise to lock into place.
7. Position the Rear Grill over the Motor Shaft, making certain the 2 notches at the top and bottom of the Rear Grill fit over the 2 prongs on the Motor housing. Secure the Rear Grill in place with the Rear Grill Mounting Nut. Turn mounting nut clockwise and tighten firmly.
8. Position the Large Fan Blade, with hollowed interior of the blade facing towards the Rear Grill, firmly onto the Motor Shaft. Align the Motor Shaft pin with the recessed groove in the back of the fan blade. Be sure the shaft protrudes from the front of the blade.
9. Position the Small Fan Blade, with guide pins into the hollowed interior of the Large Blade, and press firmly into place. Also be sure the shaft protrudes from the front of the blade.
10. Secure the fan blade onto the Motor Shaft by turning the blade cap counter-clockwise and tighten firmly.
11. Center the Front Grill by aligning the Bionaire® logo horizontally and parallel to the floor, and then place into the Rear Grill. Snap the front and Rear Grills completely together. Tighten the Grill Screw at the bottom of the Rear Grill. (**NOTE:** If Logo Plate is not already assembled to Front Grill, you must attach it by aligning the slots located on the back side of the logo plate with the notches in the grill center. Press firmly into place.)
12. Disassemble the rear cover from the 1Touch control module by sliding to upside and separate it. Attach the front of the 1Touch control module by sliding the 1 tab into the corresponding hole on the pole (Figure 2).
13. Attach the rear of the 1Touch control module to the front by inserting the 4 clips into the corresponding holes and slide down to fix it.
14. For additional security, insert and tighten the Thumb Screw into the top rear of the 1Touch control module.

Figure 1

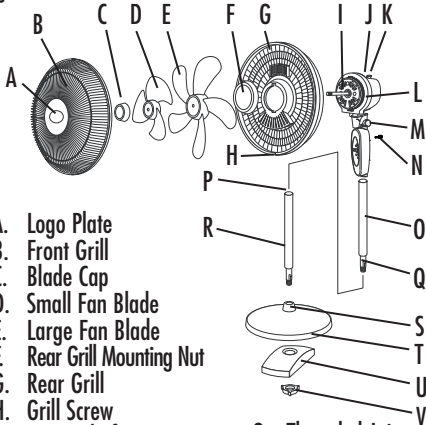


- | | |
|----------------------------|--------------------------|
| A. Logo Plate | Q. Threaded Joint (Male) |
| B. Front Grill | R. Lower Pole (Longer) |
| C. Blade Cap | S. Decorative Cap |
| D. Small Fan Blade | T. Base |
| E. Large Fan Blade | U. Base Weight |
| F. Rear Grill Mounting Nut | V. Base Nut |
| G. Rear Grill | |
| H. Grill Screw | |
| I. Motor Shaft | |
| J. Motor Housing Assembly | |
| K. Oscillation Knob | |
| L. Grill Mount | |
| M. Tilt-Adjustment Knob | |
| N. Thumb Screw | |
| O. Upper Pole (Shorter) | |
| P. Hollow End (Female) | |

OPERATING INSTRUCTIONS

Your fan is equipped with the technologically advanced 1Touch Thermostat. You can set the fan to run continuously on a manual mode or set the 1Touch Thermostat to your desired temperature setting. The 1Touch Thermostat will automatically turn your fan ON or OFF according to changes in the room's temperature based on your preset temperature setting. The comfort level ranges between 15°C and 27°C (60°F and 80°F).

Figure 2

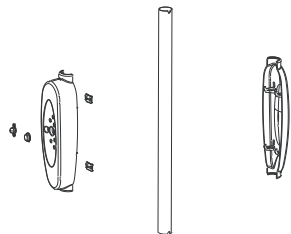

FEATURES - OPERATIONS

1. Set fan on a dry, level surface.
2. Plug cord into any standard 120 volt AC outlet.
3. The speed/mode is adjustable by pushing the Mode/O button located on the front of the control housing. Each push of the button will cycle through Manual High (II), Manual Low (I), Auto High 15°C, 18°C, 21°C, 24°C, 27°C (60°F, 65°F, 70°F, 75°F, 80°F), Auto Low 15°C, 18°C, 21°C, 24°C, 27°C (60°F, 65°F, 70°F, 75°F, 80°F) and then to OFF (O).

Note that if you hold the Mode/O button down for 3 seconds, the fan will turn off while remembering its last setting. The last fan setting will return when turned on again.

REMOTE CONTROL INSTRUCTIONS

This unit requires 2 AAA batteries, 1.5V (not included).

1. Insert 2 AAA batteries (not included) into back of remote control.
2. Press the Mode/O button on remote to begin operation.
3. Use the remote to control the same features as the base unit.

Battery Replacement

- a) Remove battery cover from remote control.
- b) Remove old batteries from the remote control.
- c) Insert two new batteries, pressing them firmly into their slot.
- d) Replace the battery cover.

NOTE:

- Replace all batteries of a set at the same time.
- Being careful not to bend or damage the contact spring, clean the battery contacts and devices' contacts prior to installing the batteries.
- Remove the batteries from the equipment when it is not being used for an extended period of time.
- Remove the used batteries promptly.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not discard used batteries into household trash containers. Contact your local government for disposal or recycling practices in your area.

This Class B digital apparatus complies with Canadian ICES-003.

ADJUSTMENT INSTRUCTIONS

Fan Head Tilt-Adjustment

1. To change the tilting angle of the fan head, simply loosen the Tilt-Adjustment Knob.
2. Move the fan head to the desired angle and firmly tighten the Tilt-Adjustment Knob to lock into place.

Reduced Height Adjustment

3. Remove the lower extension pole for reduced height.

Oscillation

The Oscillation Switch () is located at the back of the fan motor housing. To start Oscillation, push control knob down. To stop Oscillation, pull control knob up.

CLEANING / MAINTENANCE

CLEANING/MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your stand fan. Please remember:

- Always unplug the fan before cleaning or disassembling.
- Do not allow water to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, benzene.

(See instructions for fan head assembly)

1. To access the fan blade, remove the front grill and the fan blade nut.
2. Clean the fan blade, both front and rear grills with a soft cloth moistened with a mild soap solution.
3. Replace blade, tighten the fan blade nut, and securely fasten the front grill.

Fan Head, Base and Pole Cleaning

Using a soft, moist cloth, with or without a mild soap solution, carefully clean the fan base, pole, and head. Please use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.

FAN STORAGE

When storing your fan in the off season, it is important to keep it in a safe dry location. It is important to protect the fan head from dust. **WE STRONGLY RECOMMEND USING THE ORIGINAL BOX FROM PURCHASE.**

To disassemble product simply reverse the steps used in the assembly section.

If you have any questions regarding your product or would like to learn more about other Bonaire® products, please contact our Consumer Service Department at 1-800-253-2764 or visit our website at www.bonaire.com.

WARRANTY INFORMATION

3 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of three years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**