 




pure indoor living

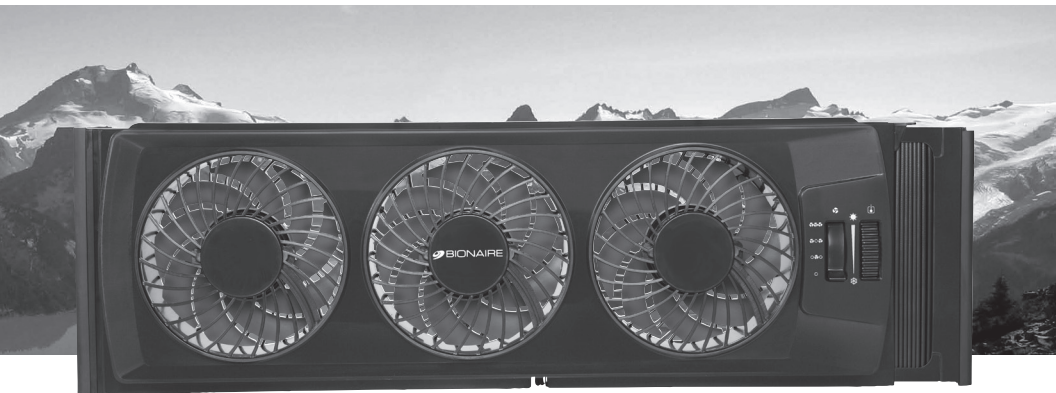

# Thin Window FAN

*WITH COMFORT  
CONTROL THERMOSTAT*

MODEL: BWF0522M-CN

## Instruction Leaflet

Read instructions before operating. Retain for future reference.



 
Questions? Comments? Call 1-800-253-2764 in North America.

# PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or return to an authorized service facility for examination and/or repair.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
12. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
13. Do not use outdoors.
14. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
15. Always use on a dry, level surface.
16. Do not operate fan until fully assembled with all parts properly in place.
17. This product is intended for household use ONLY and not for commercial or industrial applications.
18. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

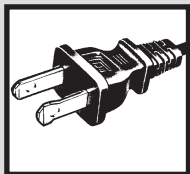

**THIS APPLIANCE HAS A POLARIZED PLUG** (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

**DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.**

# FEATURES - OPERATIONS

## INSTALLATION INSTRUCTIONS

**NOTE:** MAKE SURE YOU REMOVE ALL CONTENTS FROM THE PACKAGE. PLEASE CHECK PACKAGING MATERIALS FOR PARTS THAT COULD BE REQUIRED TO OPERATE YOUR FAN.

The window fan comes fully assembled and is ready for immediate installation (with the Slider Safe Extender Panel separately packed in the box).

This window fan has been designed to fit double-hung windows with minimum openings of 25.5 inches (65cm) wide and 8 inches (20cm) high.

 
### Horizontal Window Fan Installation

**NOTE:** THIS FAN IS DESIGNED AND RECOMMENDED FOR USE WITH A SCREEN IN THE WINDOW.


 
1. Align the Window Fan horizontally in the window with the controls facing you and the power cord located on the bottom of the window fan.
2. Set the fan into your window opening (note that in most cases the window screen does not have to be removed or left open).
3. If the fan does not fit snugly to the left and right of the window casing, open the Locking Tab (D) by pulling up and pull out the Built-In Extender Panel (F) until the fan sits safely in your window. Re-lock or close the locking tab after the fan is safely secured in the window.

Figure 1

 \*Total extendable width:  
36.7 inches (93.2cm)

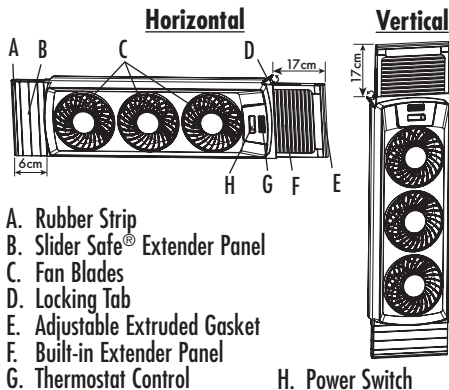

4. If the fan still does not fit snugly attach the Slider Safe® Extender Panel located in the polyfoam packaging in the original box. The fan can extend to a width of 6.7-8.7 inches (17-22cm). Slide out the Rubber Strip (A) from the left side of the fan - see Figure 2. Then slide the Slider Safe® Extender Panel along the left side of your Window Fan. Slide the Slider Safe® Extender Panel completely down the tab until it is flush on both the top and bottom of the Window Fan. Replace the Rubber Strip by sliding down along the left side of the added Slider Safe® Extender Panel - see Figure 3.

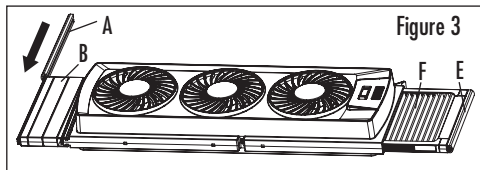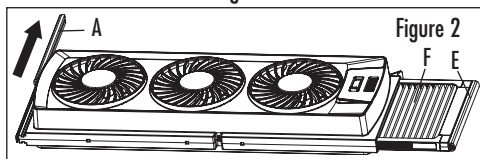

5. To keep the fan in place, carefully close the window so that the bottom edge of the window gently rests on the flat area on the top of the fan.

### Vertical Window Fan Installation

1. For vertical orientation, install unit using rigid extender panels at the base of window.
2. Set the Fan vertically in your window opening with the left side of the fan situated on the bottom and the Built-In Extender Panel on top.
3. Set the fan into your window opening (note that in most cases the window screen does not have to be removed or left open).
4. If the fan does not fit snugly to the top and bottom of the window casing, attach the Slider Safe® Extender Panel and adjust the built-in extender screen until the fan fits securely in your window (see "Horizontal Window Fan Installation" section).

**WARNING:** BE SURE FAN IS SECURELY INSTALLED IN YOUR WINDOW AT ALL TIMES. DO NOT LEAN OR PUSH ON THE FAN WHILE IT IS IN THE WINDOW.

# FEATURES - OPERATIONS

## OPERATING INSTRUCTIONS

 
- Make sure Power Switch (H) is in the OFF (○) position.
- Plug into 120V AC electric outlet.
- To use in EXHAUST mode, manually turn the unit around in the window. (Controls can be operated from both sides.)
- To start the unit, turn the Power Switch to activate the number of fan blades in operation (see the close-up of the control panel below).

**NOTE: If you would like the fan to run continuously, turn the Comfort Control Thermostat dial up to High (☀) as far as it will go.**

## COMFORT CONTROL THERMOSTAT INSTRUCTIONS

Your window fan is equipped with a Comfort Control Thermostat that automatically turns the fan on and off depending on your preset comfort level.

1. For the fan to turn on, the thermostat must be set at a temperature lower than the current room temperature. If the fan power is on but the fan blades (C) aren't moving, turn the Comfort Control Thermostat (G) dial up to High (☀) until the fan blades (C) spin.
2. To set your desired comfort level, run the fan until the temperature in your room is comfortable. Slowly turn the Comfort Control Thermostat dial down to Low (❄) until the fan blades turn off. This is the temperature your fan will maintain.

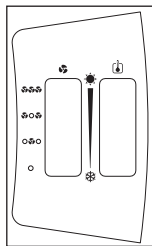

**NOTE: If you would like the fan to run continuously, turn the Comfort Control Thermostat dial up to High (☀) as far as it will go.**

# CLEANING / STORAGE

## CLEANING/MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your window fan. Please remember:


 

- Always unplug the fan before cleaning or disassembling.
- Do not allow water to drip on or enter into the fan motor housing.
- Be sure to use a soft cloth moistened with mild soap solution.
- Do not use gasoline, thinner or benzene as a cleaner.
- The fan grills not supposed to be disassembled by user. Recommend to use a small paint brush and a vacuum to clean the fan blades.

## FAN STORAGE

For all window fans, and fans that come already assembled.

- It is important to keep it in a safe, dry location.
- We recommend using the original (or appropriately sized) box.
- Please remember to protect the fan from dust or moisture.

## WINDOW FAN ACCESSORIES

Window Fan Extender Panel (164241)		To order please go to <a href="http://www.bionaire.com">www.bionaire.com</a> or call 1-800-253-2764
Rubber Strip (164243)		
Adjustable Extruded Gasket (164242)		

If you have any questions regarding your product or would like to learn more about other Bionaire® products, please contact our Consumer Service Department at 1-800-253-2764 or visit our website at [www.bionaire.com](http://www.bionaire.com).

# WARRANTY INFORMATION

## 1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period.

Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### **What are the limits on JCS's Liability?**

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### **How to Obtain Warranty Service**

#### In the U.S.A.

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

#### In Canada

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-253-2764 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**